

# INSTALLATION AND OPERATION MANUAL

## EZ-HDA6

**Stereo Headphone Distribution Amplifier**

Model numbers:  
EZ-HDA6 includes power supply with North American plug  
EZ-HDA6X includes worldwide power supply (specify plug)

Visit the RDL website for hundreds of professional A/V products made in the USA by RDL.

[www.rdl.net.com](http://www.rdl.net.com)

**Decades of Performance, Quality and Value**

---

RDL • 659 N. 6th Street • Prescott, AZ • USA 86301 • Sales: 800-281-2683 • 928-443-9391  
Tech Support: 800-933-1780 • 928-778-3554 • RDL Europe Sales & Support: (31) 20-6238-983



# EZ-HDA6

## Stereo Headphone Distribution Amplifier

- One Stereo Input to Six Stereo Outputs
- Unbalanced Inputs on Rear Panel
- Input on MINI, 1/4" (6.3 mm) or RCA Jacks
- LOOP OUT Jack for 1/4" (6.3 mm) Input
- 1/4" (6.3 mm) Headphone Outputs on Rear Panel
- Front-Panel LEVEL Control for Each Output

---

## TYPICAL APPLICATION

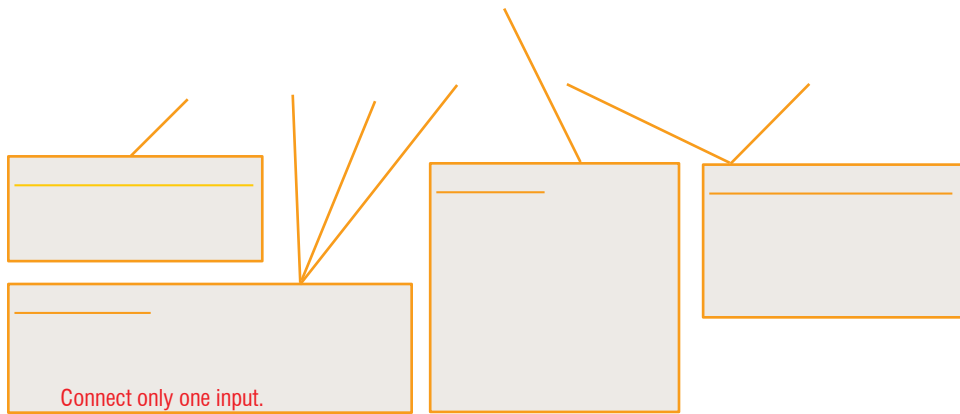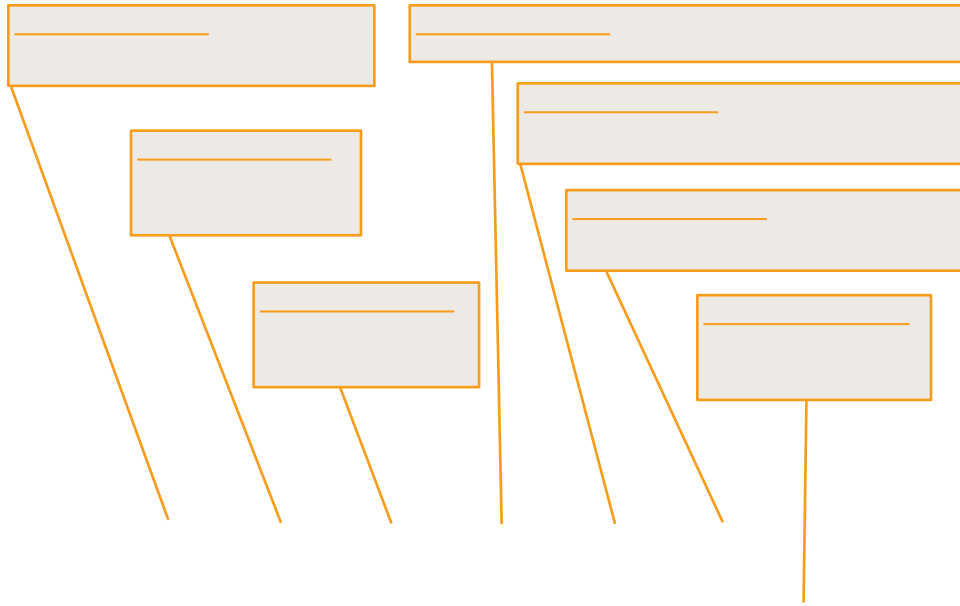

Insert Power Plug

Rotate 1/4-turn  
clockwise to lock.

Rotate 1/4-turn  
counter-clockwise  
to unlock.

Screw  
directly to flat  
surface without  
installing rubber feet.

Peel backing and stick the 4 rubber  
feet to chassis in recesses provided.

Recess  
Bottom View  
of chassis

---

**SELECTED MOUNTING ACCESSORIES** Complete accessory listing available at: [rdlez.com](http://rdlez.com)

**EZ-RA6**

**Rack Adapter** for 6 Increments of 1/6 Rack Width

**EZ-CC6**

**Component Chassis** for 6 Increments of 1/6 Rack Width

**EZ-SMB2**

**Surface Mount Bezel** for 1/3 Rack Width Products

**EZ-DC2**

**Desktop Chassis** 1/3 Rack Width

**EZ-UCB2**

**Under-Counter Brackets** 1/6 or 1/3 Rack Width

**EZ-SD2**

**Storage Drawer** 1/3 Rack Width

Use In Place of Filler Panel  
Holds Adapters and Cables  
Mounts in EZ-CC6 and EZ-RA6

---

**TYPICAL PERFORMANCE**

CE

891-1525